
SHENZHEN GREEN DIGITAL POWER TECH CO., LTD						
Tel:86-755-86582701 Fax:86-755-27464649 Email:sales@green-charger.com Http://www.green-charger.com						
SPECIFICATION			PREPARE	CHECK	APPROVE	
MODEL:	USED IN:					
ISSUE DATE :	2024/3/12 11:09:24					
COMMON/UNITE	DOC. NO:			REV.: 1.0	PAGE: 1 OF 1	


		BG	21-[20,40] Battery Fuel Gauge			
No.	No. Item		Specification	Remark		
Input fo	^r eature					
01 02	Rating Input Voltage Suitable battery type	V	7.2V~48V Li-ion battery 6.4V~48V LiFePO4 battery 7.2V~48V Ni-MH battery 7.2V~48V Ni-Cd battery 12V~48V VRLA battery	This module can be selected in two states. The first is to specify the battery specification and write the battery capacity and type into the module memory. The second is not to specify the battery specification. After the user connects the battery and the module, press and hold the FN button, and then perform a complete charge and discharge cycle for the battery. Then press and hold the FN key again. BG21 will save the learned battery information, and call this battery parameter later.		
03	Max. Charge/Discharge Current permitted. & typical series impedance.	A	20A (impedance: 5mR) 40A (impedance: 2.5mR)	Model: BG21-20 Model: BG21-40		
04	Rating Consumed power	mA	Screen on: 20mA, screen off:6mA			
05	OFF Status leakage current	mA	0mA			
Top Vie	ew and Illustration					
	on level tin	nning	Light status: Red on: screen on Red flash: screen off Off: no power Show Curve Screen switch button RS485(option capacity	Batt – OUT – nal) Battery positive and negative		
06	Voltage accuracy	%	+-1.5%			
07	current accuracy	%	+- 5%			
08	08 Capacity accuracy		+-5%			
	mental conditions and shape param	eters °C				
09	1 1 9 1		-10 ~ +50			
10 Operating humidity		%RH				
11 storage temperature		°C %RH	-40 ∼ +70			
	12 Storage humidity					
	13 Anti-vibration level		5MM/50HZ/600S			
23	8		50			
24	size	mm	75*44*19 (length*width*height)			

SHENZHEN GREEN DIGITAL POWER TECH CO., LTD							
Tel:86-755-86582701 Fax:86-755-27464649 Email:sales@green-charger.com Http://www.green-charger.com							
SPECIFICATION			PREPARE	CHECK	APPROVE		
MODEL:	USED IN:						
ISSUE DATE :	2024/3/12 11:09:24						
COMMON/UNITE	DOC. NO:			REV.: 1.0	PAGE: 2 OF 1		

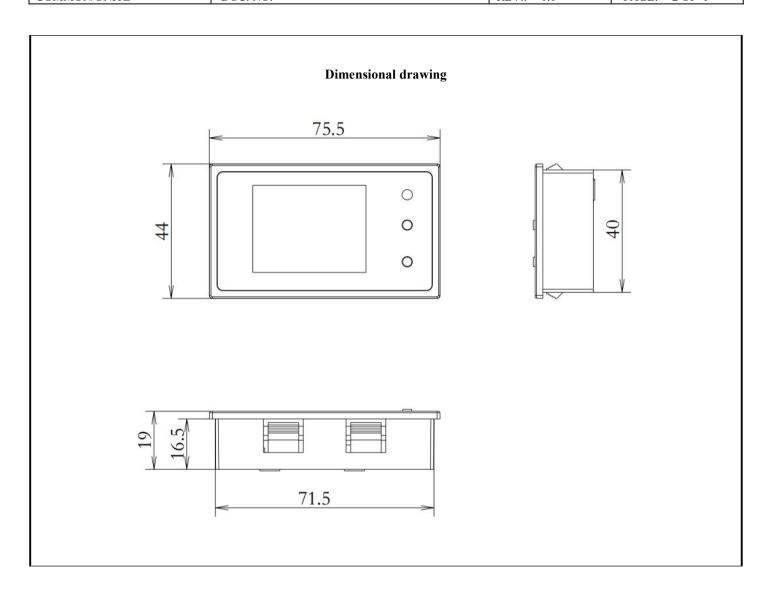

SHENZHEN GREEN DIGITAL POWER TECH CO., LTD							
Tel:86-755-86582701 Fax:86-755-27464649 Email:sales@green-charger.com Http://www.green-charger.com							
SPECIFICATION			PREPARE	CHECK	APPROVE		
MODEL:	USED IN:						
ISSUE DATE :	2024/3/12 11:09:24						
COMMON/UNITE	DOC. NO:			REV.: 1.0	PAGE: 3 OF 1		

1. Wires connection diagram

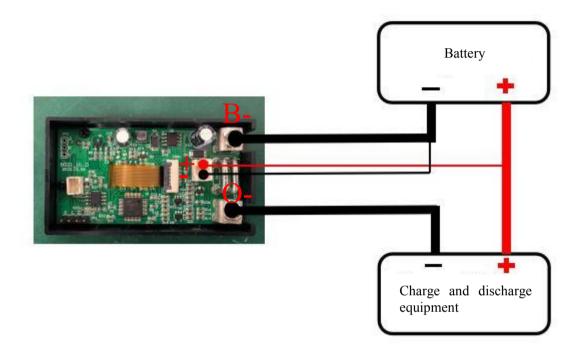

2.Calibrate

After connecting the Wires, do not charge and discharge first, at this time, check whether the current display of the display screen is \leq 0.1A. If it is greater than or equal to 0.1A, calibration is required.

The calibration procedure is as follows: long press the "ON" key and do not release. After about 3 seconds, the status indicator (red light) will blink. After the status indicator has blinked, click the "FN" key (do not press long) to complete the calibration.

3. Initial battery information

For the battery used for the first time, the user needs to connect the battery and the module, long press the FN button, and then do a complete charge and discharge cycle of the battery.

The specific procedure is as follows: Press and hold FN for about 2 seconds. If Test is displayed on the right of SOC, the battery information starts to be input. In this case, you only need to

To do a complete charge and discharge cycle of the battery, BG21 will save the learned battery information, and later use will call this battery parameter.

4. View the curve

During the charge and discharge process, you can click FN to view the charge and discharge curve, and then click FN to return to the main page.